
# INSTRUCTIONS FOR USE BONECO E2441A

# PART NAMES AND TECHNICAL SPECIFICATIONS

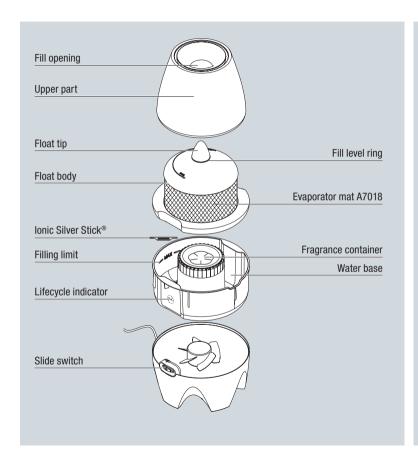 


Technical specifications	
Power supply voltage	230 V / 50 Hz
Power consumption	11 W
Humidity output	Up to 140 g/h
Recommended room size	Up to 25 m <sup>2</sup>
Capacity	Max. 3,81, min. 0,21
Dimensions $L \times W \times H$	320 × 320 × 400 mm
Weight (empty)	3,8 kg
Operation noise level	35-48 dB (A)


## PREPARING FOR FIRST USE

#### UNPACKING

 Remove the BONECO E2441A evaporator with its plastic bag from the box.

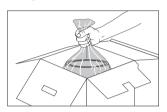

 - Place the BONECO E2441A evaporator on the floor or a flat, even surface.
- Note that there must be a minimum clearance of 30 cm to the wall and 120 cm above the unit.

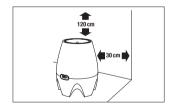


#### FILLING DIRECTLY

1. Pour clean, cold tap water into the fill opening of the BONECO E2441A evaporator.



 2. The maximum capacity is 3.8 liters. Stop adding water as soon as you can see the fill level ring:

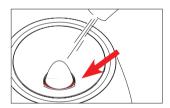


#### FILLING INDIRECTLY

1. Lift off the upper part.



 2. Remove the water base together with the float body.

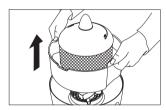

- 3. Directly fill the water base with fresh, cold water.
- 4. Stop adding water as soon as it has reached the maximum filling limit. The maximum capacity is 3.8 liters.


### **OPERATION**
 
#### **OPERATING MODES**

The BONECO E2441A evaporator has two operating modes, which can be selected using the slide switch. In position «I», the BONECO E2441A evaporator runs quietly (night mode). In position «II», the BONECO E2441A evaporator runs at normal output.

#### **USING FRAGRANCES**

For additives such as fragrances and essential oils, always use the fragrance container:

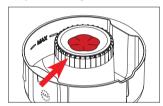

Never mix any additives into the water base itself, since doing so can decrease the performance of the BONECO E2441A evaporator and even cause damage.

#### PUTTING INTO OPERATION

- Fill the BONECO E2441A evaporator with water (see page 12).
- 2. Plug the unit in at a power outlet.
- 3. Set the slide switch to «I» or «II» to select your desired operating mode.



- In either mode, a green LED indicates that the BONECO E2441A evaporator is operating correctly.
- If the LED is red, either the water base is not in its correct position, or the level of the water is too low and needs to be replenished.

#### WATER AND HYGIENE

After having not been operated for a time, the BONECO E2441A evaporator should be emptied and cleaned. Before using the evaporator again, it should be filled with fresh water. Otherwise, unwanted odors can result. Also note the instructions on page 14 on this topic.

## **CLEANING AND MAINTENANCE**

#### CARE INSTRUCTIONS

- with time and use, the performance of the evaporator mat and the lonic Silver Stick® decreases. Regular maintenance and cleaning is necessary to ensure high output and a long service life.
- Recommended cleaning and maintenance intervals vary depending on air and water quality, and length of operation.
- Dish-washing liquid and a scrub brush are recommended for cleaning.

Always unplug the unit from the power outlet before cleaning. Failure to do so causes risk of fatal injury from electric shock!

Interval	Activity
Daily	Check the water level; add water if necessary
After 1 week without operation	Empty and clean the BONECO E2441A evaporator
Every 2 weeks	Clean the water base
Every 10-12 weeks (or as necessary)	Replace the evaporator mat (see page 15)
Yearly	Replace the lonic Silver Stick® (see page 15)

 
## REPLACE THE IONIC SILVER STICK® AND EVAPORATOR MAT

#### **IONIC SILVER STICK®**

The lonic Silver Stick® utilizes the antimicrobial property of silver to provide optimum water quality maintenance for one year. It is effective as soon as water comes into contact with it — even if the BONECO E2441A evaporator is switched off.

#### LIFECYCLE INDICATOR

To remind yourself of when you put the lonic Silver Stick® into operation, please mark the current month on the lifecycle indicator and write the current year on the line provided.

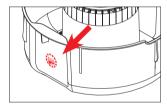


#### REPLACING THE IONIC SILVER STICK®


- Replace the lonic Silver Stick® annually to guarantee antimicrobial effectiveness.
- The used lonic Silver Stick® can be thrown out with your household waste.

#### REPLACING THE EVAPORATOR MAT

 - Replace the BONECO A7018 evaporator mat if there is excessive contamination, calcification, odor, reduced suction etc. For replacements, check with your BONECO reseller or visit us online at www.boneco.com.
- Turn the float tip in the direction indicated by «OPEN» to remove it.

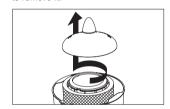

 2. Pull out the used evaporator mat and throw it out with your household waste.

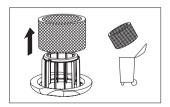

- 3. Insert the new evaporator mat.
- 4. Install the float tip onto the float body by turning it in the «CLOSE» direction.

